


W przeglądarce internetowej należy wpisać <http://192.168.1.1>

Pojawi się okno z pytaniem o login i hasło:

login **admin**

hasło **admin**

Z poniższego okna należy odpisać adres MAC WAN

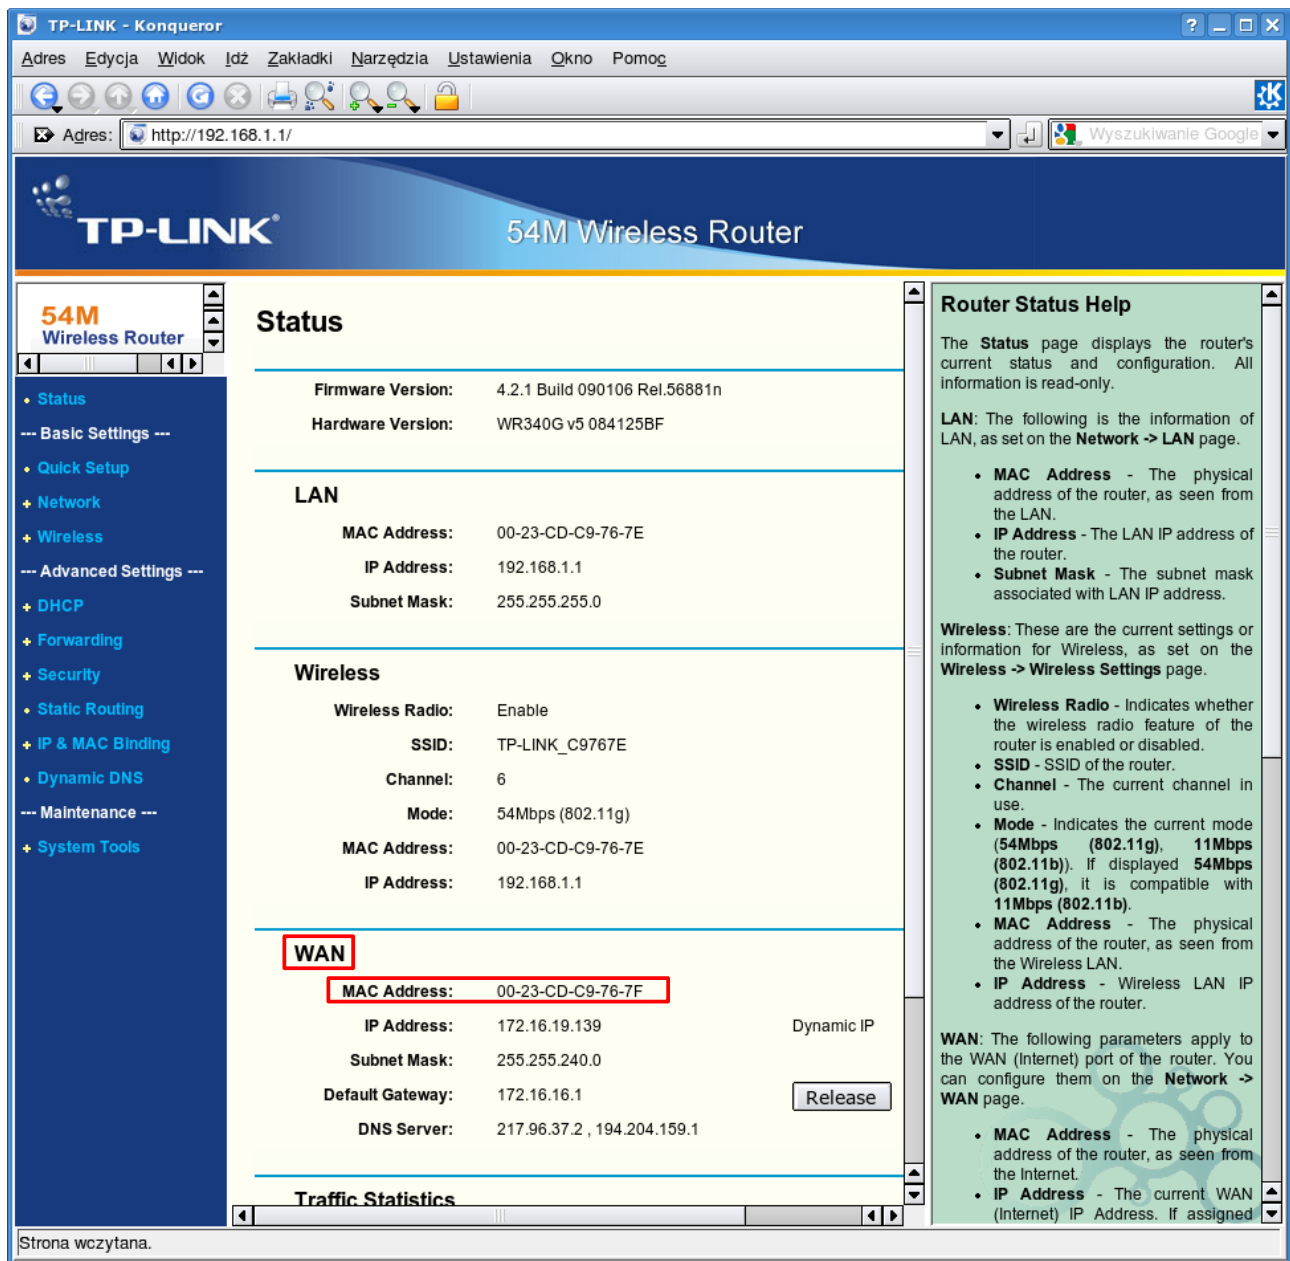

The screenshot shows the TP-Link Konqueror web interface for a 54M Wireless Router. The browser address bar shows <http://192.168.1.1/>. The page title is "TP-LINK 54M Wireless Router". The left sidebar contains navigation links: Status, Basic Settings, Quick Setup, Network, Wireless, Advanced Settings, DHCP, Forwarding, Security, Static Routing, IP & MAC Binding, Dynamic DNS, Maintenance, and System Tools. The main content area is titled "Status" and displays the following information:

<b>Firmware Version:</b>	4.2.1 Build 090106 Rel.56881n	
<b>Hardware Version:</b>	WR340G v5 084125BF	
<b>LAN</b>		
<b>MAC Address:</b>	00-23-CD-C9-76-7E	
<b>IP Address:</b>	192.168.1.1	
<b>Subnet Mask:</b>	255.255.255.0	
<b>Wireless</b>		
<b>Wireless Radio:</b>	Enable	
<b>SSID:</b>	TP-LINK_C9767E	
<b>Channel:</b>	6	
<b>Mode:</b>	54Mbps (802.11g)	
<b>MAC Address:</b>	00-23-CD-C9-76-7E	
<b>IP Address:</b>	192.168.1.1	
<b>WAN</b>		
<b>MAC Address:</b>	00-23-CD-C9-76-7F	
<b>IP Address:</b>	172.16.19.139	Dynamic IP
<b>Subnet Mask:</b>	255.255.240.0	
<b>Default Gateway:</b>	172.16.16.1	<input type="button" value="Release"/>
<b>DNS Server:</b>	217.96.37.2 , 194.204.159.1	

Below the WAN section, there is a "Traffic Statistics" section. On the right side, there is a "Router Status Help" panel with the following text:

**Router Status Help**

The **Status** page displays the router's current status and configuration. All information is read-only.

**LAN:** The following is the information of LAN, as set on the **Network -> LAN** page.

- MAC Address** - The physical address of the router, as seen from the LAN.
- IP Address** - The LAN IP address of the router.
- Subnet Mask** - The subnet mask associated with LAN IP address.

**Wireless:** These are the current settings or information for Wireless, as set on the **Wireless -> Wireless Settings** page.

- Wireless Radio** - Indicates whether the wireless radio feature of the router is enabled or disabled.
- SSID** - SSID of the router.
- Channel** - The current channel in use.
- Mode** - Indicates the current mode (54Mbps (802.11g), 11Mbps (802.11b)). If displayed 54Mbps (802.11g), it is compatible with 11Mbps (802.11b).
- MAC Address** - The physical address of the router, as seen from the Wireless LAN.
- IP Address** - Wireless LAN IP address of the router.

**WAN:** The following parameters apply to the WAN (Internet) port of the router. You can configure them on the **Network -> WAN** page.

- MAC Address** - The physical address of the router, as seen from the Internet.
- IP Address** - The current WAN (Internet) IP Address. If assigned

At the bottom of the browser window, it says "Strona wczytana."